

# URBAN SUEDE

Wallcoverings » Decorative Wallcoverings



Brand: **Bi Mei**

# URBAN SUEDE

Wallcoverings » Decorative Wallcoverings



G0112TF1501 IVORY



G0112TF1502 CAMEL



G0112TF1504 COOL  
GREY



G0112TF1505  
DARKNESS



G0112TF1506 OLIVE  
DRAB



G0112TF1507 GREEN  
APPLE



G0112TF1508  
MACAROON PINK



G0112TF1509 BLUE  
SKY




G0112TF1510  
WESTFORD WHITE



G0112TF1511 VANILLA



G0112TF1512 BELFAST  
BUFF

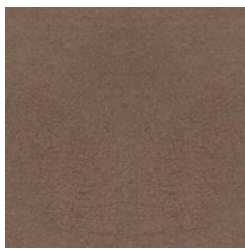

G0112TF1514 EARTH



G0112TF1515 GOLD  
SAND



G0112TF1516 DRUZY



G0112TF1517 ROCK



G0112TF1518 MINK

# URBAN SUEDE

Wallcoverings » Decorative Wallcoverings

Urban Suede is a 140cm wide decorative wallcovering with a suede look that's available in 16 colourways.

Roll Size 140cm x 10m - Available by the FULL ROLL ONLY

Composition 100% suede on a paper backing

Pattern Repeat Size N/A

Fire Rating Tested in accordance with AS ISO 9705 2003 for the purpose of determining the Group Number classification as required by the Building Code of Australia for the control of fire spread on interior wall and ceiling linings.

The result achieved was:  
Classification - Group 2  
Specific Extinction - Less than 250m<sup>2</sup>/kg

Warranty 2-year warranty. Visit [baresque.com.au/warranty](https://www.baresque.com.au/warranty) for complete details.

Lead Time

- 4-weeks (approx) from Wednesday subject to stock availability.
- Additional 1-week for Western Australia.
- Express delivery is available subject to a surcharge. Contact Baresque for details and pricing.

Suggested Installation

Non-reverse hang / butt join.

If your order contains several numbered rolls of one single item/ reference, please first install the roll with the highest number, and then continue to install the other rolls in sequence, in descending order.

Measure and cut 3 strip lengths. Add 5 to 10 cm to top and bottom of each strip.

For printed patterns, plan your match from the roll before cutting

Mark each strip coming from the roll on the back and hang in the same sequence

Reverse alternate lengths when instructed to do so by label on the roll

# URBAN SUEDE

Wallcoverings » Decorative Wallcoverings

---

## Care Instructions

Always use a clean, white, soft cloth.

Remove liquid stains immediately using a dry cloth. Avoid hard scrubbing.

For tougher stains, dampen the cloth with warm water or a weak dilution of liquid detergent and apply being careful not to soak the material. Always work towards the centre of the stain so as to avoid further spreading.

Remove any detergent with a clean, damp cloth. Gently pat dry.

Always test in an inconspicuous area first.

---

## Additional Comments

Some variation in colour within and across batches is an inherent, unavoidable and enjoyable characteristic of the product. When installed, some panelling effect will be apparent.

---

# URBAN SUEDE

Wallcoverings » Decorative Wallcoverings

---

## Colour & Finish Options