

ZINTRA WRAPPED INSTALL GUIDE

NOTE design is indicative only



baresque.com.au
e info@baresque.com.au
p 1300 306 399

ZINTRA WRAPPED

MAKE SITE READY

Tips for Installation:

1. Clean applicable walls free of dirt and dust to ensure good a good bond.
2. Set out tiles as specified to be sure all pieces are included
3. We would recommend a rendered print out of the layout to aid install
4. There should be no gaps between tiles. If issues present please contact Baresque prior to installing.


You Will Need:

1. Measuring tape
2. Pencil
3. Wide field laser
4. Level

ZINTRA WRAPPED INSTALL METHOD

STEP 1


1) Use laser and mark the bottom edge of the first row of tiles and a centreline for tile assembly

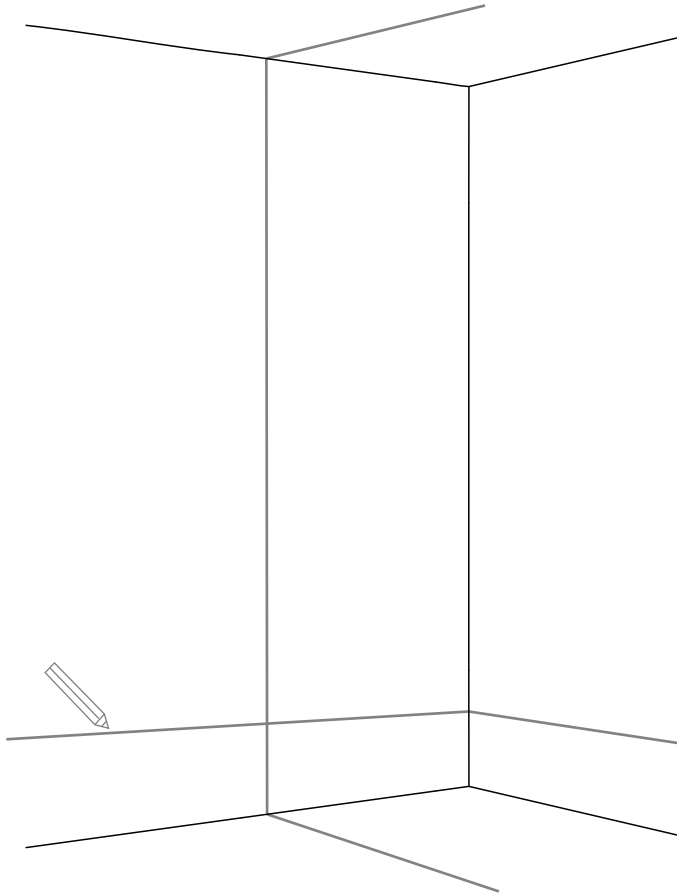

STEP 2

2) Remove tape backing from each tile as you apply

TIP: A sharp blade will help to pick at the backing for easy removal

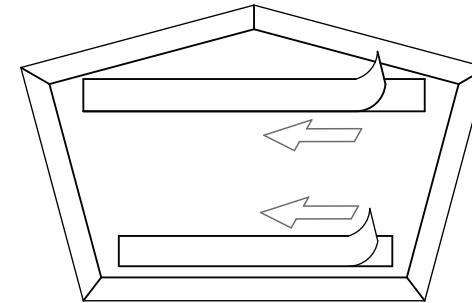


NOTE: If install is on a rough surface ie. brick, we would recommend using silicone adhesive to help bond tiles to wall. Follow adhesive manufacturers instructions for gluing method

ZINTRA WRAPPED

INSTALL METHOD


STEP 4

4) Fix first Tile starting from the centreline and lower pencil marking. Apply pressure over entire tile to make sure a secure bond is achieved

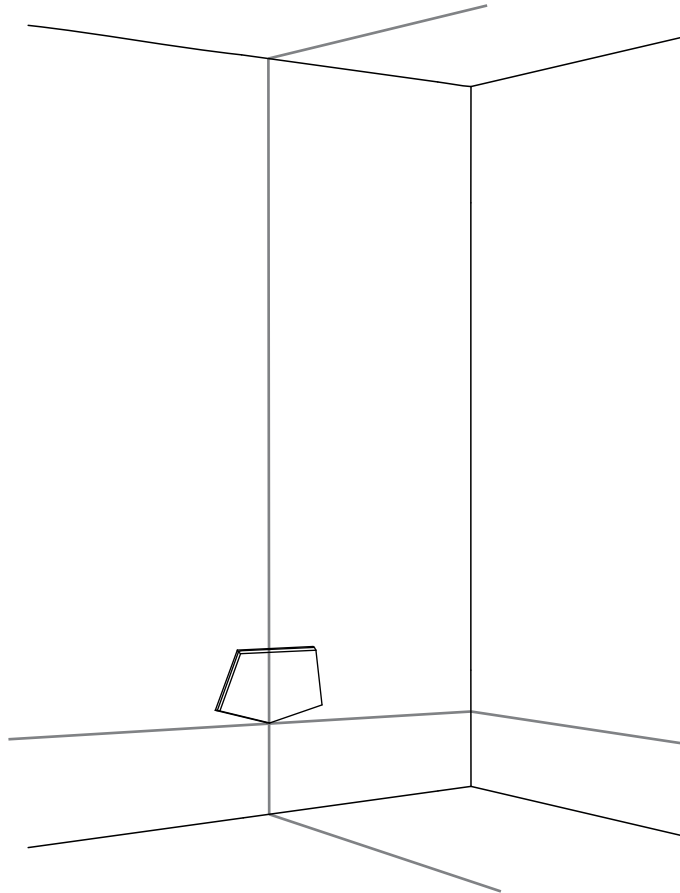


STEP 5


5) Continue to check installation is square and level using a level or laser as you apply tiles to wall

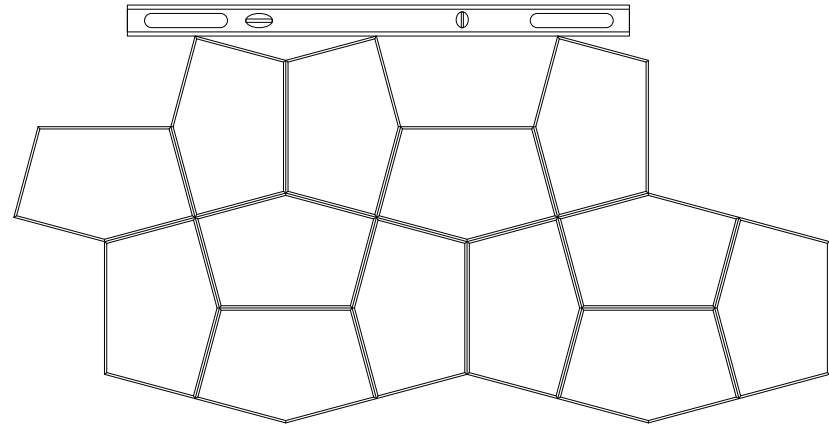

ZINTRA WRAPPED
INSTALL COMPLETE

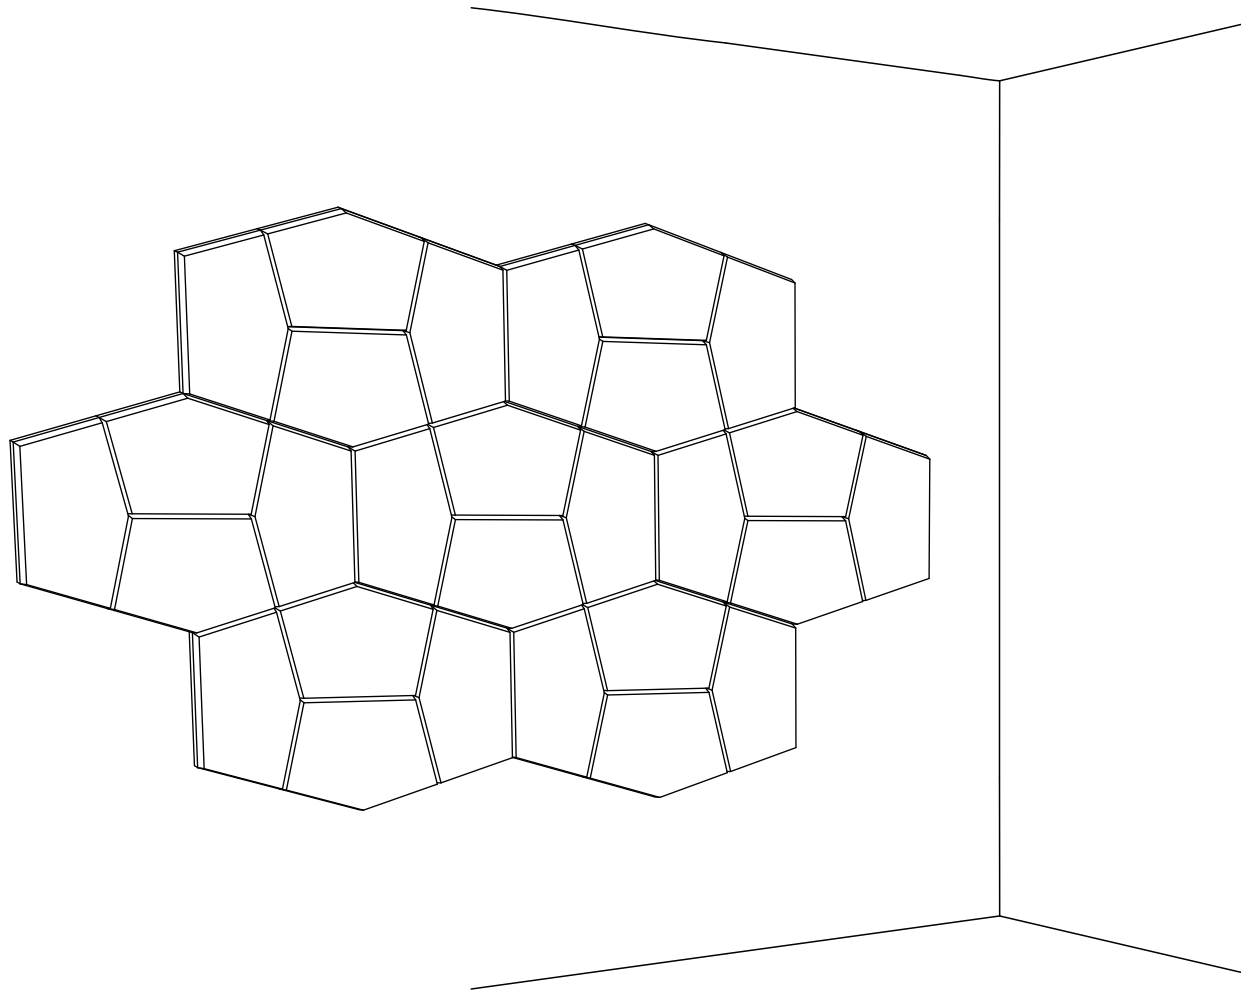

**ZINTRA WRAPPED
PARTS**

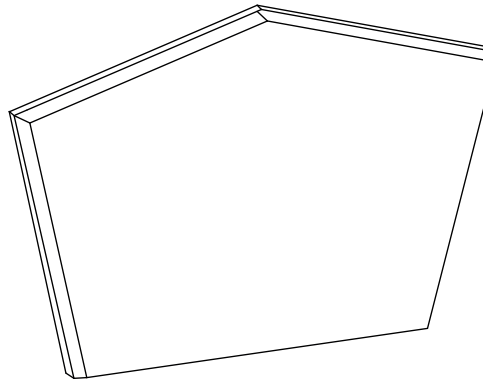

**ZINTRA WRAPPED TILES
in specified shape/finish/colour**